

## PROBUS PROJECTOR – EPSON EB-W12 SIMPLE INSTRUCTIONS

### REFERENCE

Epson – User's Guide – Multimedia Projector EB-W12 (PDF)

Page numbers mentioned below reference this document.

### PURPOSE


These instructions are designed for setting up the projector in combinations with a laptop computer (Windows).

Typically, presentation output and control would be from the laptop e.g. MS PowerPoint and photos.

The instructions do not cover use of the Remote Control.

### EPSON EB-W12 BASICS

#### Control Panel

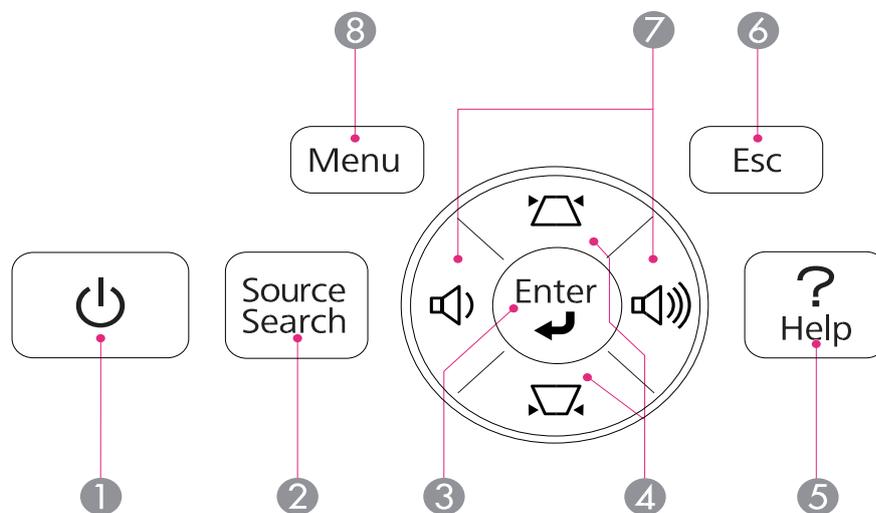

1. On/Off button
2. Source/Search button
3. Enter button used when configuring menus.
4. Manually correct distortion
5. Help button
6. Escape button stops current function
7. Adjusts volume plus other
8. Menu button displays and closes the Configuration menu.

## **PROJECTING IMAGES**

**For further information refer to the full manual**

### **Connecting Projector to Laptop**

1. Connect the projector to electrical outlet.
2. Connect the projector to laptop using HDMI cable. Make sure HDMI cable is pressed well into the socket.
3. Turn on the projector
4. Slide open the A/V mute slide
5. Turn on the laptop.
6. Change to laptop screen output

### **Correcting Keystone Distortion**

This is achieved using the top or bottom middle button as required

### **Adjust Image Size**

Use the zoom ring

### **Correct Focus**

Use the focus ring.

### **Select Projection Quality (Selecting Colour Mode)**

This can be done via the Menu Pgs 41 and 42. Colour Mode should be set as "Presentation".

### **Setting Auto Iris**

See page 42 of full manual.